



NON-SLIP

Folded Corner Clipper XL

Larger 10" size offers all the same great techniques – and is the perfect size for pre-cut 10" squares
Designed by Susan Nelson

#CGRFCCXL
 Made in USA



SEE A DEMO
 SCAN WITH ANY
 QR READER

Creative Grids® USA, Inc.
 400 W. Dussel Dr. Ste B
 Maumee, OH 43537-1636
 www.creativegridsUSA.com

 
Creative Grids® UK, Ltd.
 Unit 23A Pate Road
 Leicester Road Industrial Estate
 Melton Mowbray
 Leicestershire, LE13 0RG England
 www.creativegrids.com




NON-SLIP Folded Corner Clipper XL

Make Folded Corners quickly and accurately with the Creative Grids® Folded Corner Clipper XL. No need to draw pencil lines! Since you have to trim the corner anyway, why not trim it first, and use the raw edge as your seam guide? AND... Since the corner was trimmed with a straight edge, it's ready to sew into a Half-Square Triangle Block! Larger 10" size is perfect for pre-cut 10" squares.

The Folded Corner Method is Used in a Variety of Blocks:




Cornered Rectangle

 


Flying Geese

Use Leftover Corners

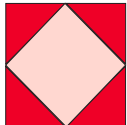

Diamond in a Square

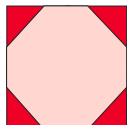


Snowball




Half-Square Triangle

Directions for using the Folded Corner Clipper XL

1. Place a square of corner fabric on top of the base fabric, right sides together. Align edges of fabric with the markings on the Folded Corner Clipper XL. Trim away corner triangles with a rotary cutter.

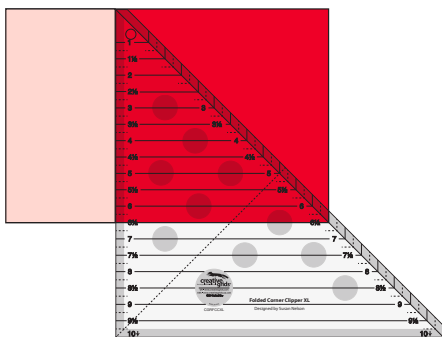


2. The accurately trimmed edge serves as a guide for sewing corner to corner with a 1/4" seam. Press piece open, making a folded corner.

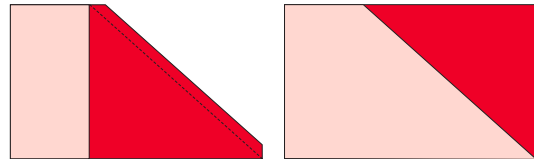


Cut Half-Square Triangles


Cut two strips, 1/2" wider than finished block. Place strips right sides together. Align markings of Folded Corner Clipper XL with left side. Trim.

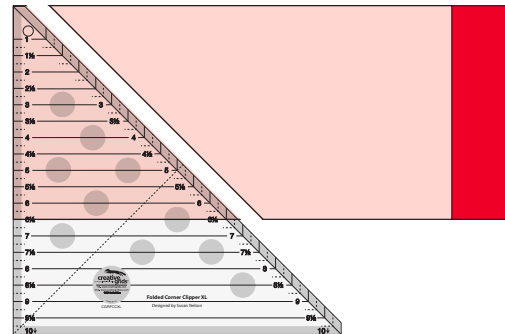

Rotate template and repeat.

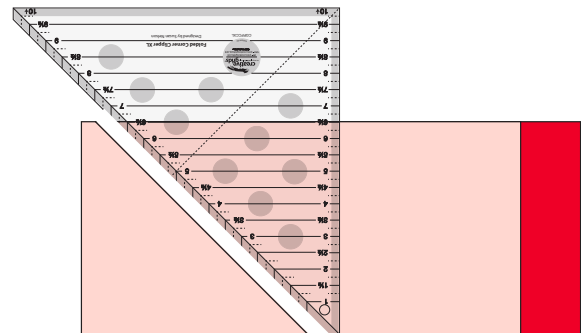


Sew and press open.

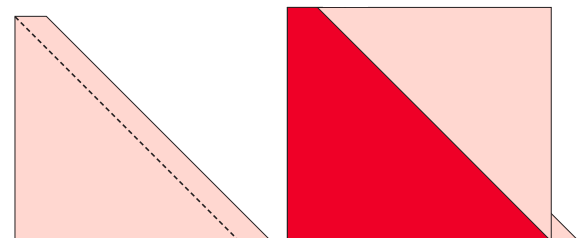


Folded Corner Clipper XL cont.

Trim Half-Square Triangle Blocks

Before pressing block, place bottom edge at desired size and align seamline with the Folded Corner Clipper seamline. Trim dog-ear and left edge.

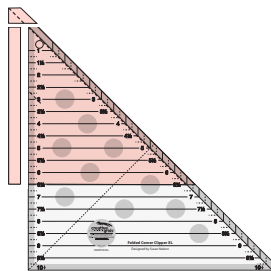


Press open.

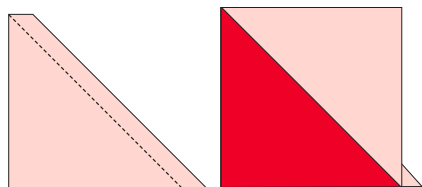


Prepare Bindings and Borders

1. Place one strip on top of the other, matching right edges, with both pieces right side up. Align markings of Folded Corner Clipper XL with lower right corner as shown. Trim.

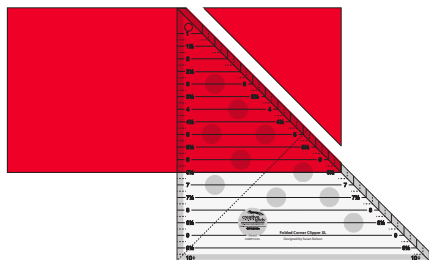

2. Rotate top piece and place wrong side up on the bottom piece. Sew $\frac{1}{4}$ " seam and press open.

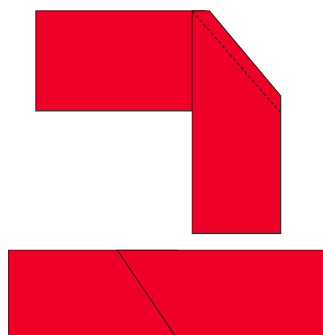

The Original **NON-SLIP** Ruler



Creative Grids® USA, Inc.
400 W. Dussel Dr. Ste B,
Maumee, OH 43537-1636
www.creativegridsUSA.com

Creative Grids® UK, Ltd.
Unit 23A Pate Road
Leicester Road Industrial Estate
Melton Mowbray
Leicestershire, LE13 0RG England
www.creativegrids.com

Creative Grids is covered by U.S. Trademark Registration No. 2,796,615

Mitered Corner Borders


To miter border corners, cut border piece to measure finished outside edge, adding $\frac{1}{2}$ ". Fold in half, wrong sides together. Trim corners as shown.

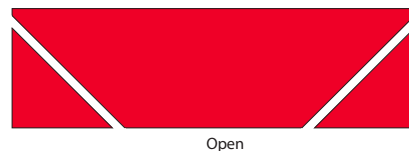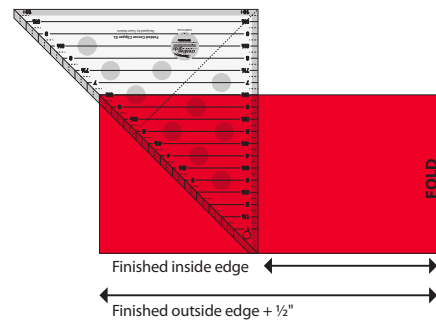


Add-a-Corner

(without using Folded Corner method)

1. Determine the size of the triangle needed. Place the template as shown, with the diagonal seam line at the point that the added corner seam line will be. The edges of the block will indicate the size of the triangle needed. (Round up to a larger size and it will be trimmed later.) Cut triangle from corner using the template.

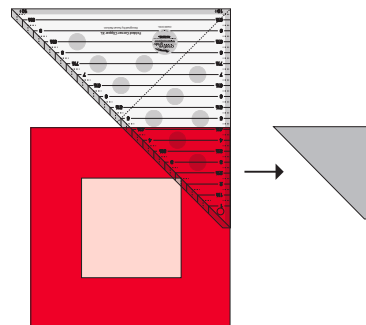

2. Place the template as show, with the diagonal seam line at the point that the added triangle will be. Use the template lines to confirm that the template is centered on the block. Trim corner.

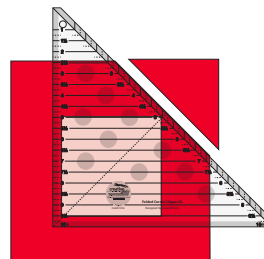

3. Sew triangle to cornered edge, using cut edge as $\frac{1}{4}$ " seam line. Press open and trim corner to size.

