

**TIMELESS
TREASURES**


BROOME STREET PATTERNS



Row by Row On the Go

by Debra Gabel

Sewing Machine Cover
Designed by Osie Lebowitz

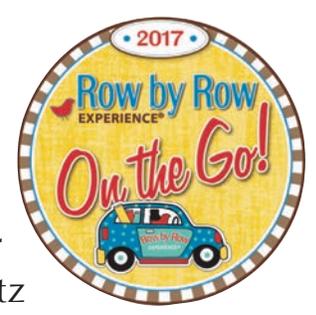

Finished quilt size: 17" W x 14"H x 8" D

Fabric Requirements

- 5/8 yard Row-C5060 Map (front and back)
- 5/8 yard Row-C5058 Multi (top band)
- 1/3 yard Row-C5061 Multi (side pockets)
- 1/3 yard Fun-C8224 Jade (sides)
- 1 yard Row by Row lining fabric of your choice
- 1/4 yard Tonga-B7900 Silver
- 1/8 yard Tonga-B7900 Red
- 1/8 yard Tonga-B7900 Blue
- 1/8 yard Tonga-B7900 Black
- 1/8 yard Tonga-B7900 Beach

Other supplies:

Camper Design by Debra Gabel of
www.zebrapatterns.com
(See page 4 for the camper template.)



- 1 yard foam stabilizer, such as By Annie Soft and Stable
- 1/2 yard paper-back fusible web

Note: Measure your machine before cutting to be sure the cover will fit as listed; adjust dimensions if needed.

Cutting

From Row-C5060 Map:

- Cut two 18" x 15" rectangles for front and back.

From Row-C5058 Multi:

- Fussy-cut one 18" x 9" rectangle for top.

From Row-C5061 Multi:

- Cut two 9" squares for side pockets

From Fun-C8224 Jade:

- Cut two 9" x 15" for sides.

From both lining and stabilizer:

- Cut two 18" x 15" rectangles, one 18" x 9" strip, two 9" squares and two 9" x 15" rectangles.

Remaining fabrics and fusible web:

- Use for camper appliqué.

Construction

All seam allowances are 1/2" and pieces are sewn right sides together.

1. Use B7900 Silver, B7900 Red, B7900 Blue, B7900 Black and B7900 Beach fabrics for machine appliquéing the camper design onto the right side of one 18" x 15" C5060 Map rectangle, as shown in the project photo.
2. Layer one 18" x 15" stabilizer rectangle under each 18" x 15" C5060 Map front and back rectangle with wrong sides together. Machine quilt as desired.
3. Repeat to layer and quilt the top and side stabilizer pieces with their respective size fabric pieces, quilting as desired.
4. To make the side pockets, place one 9" C5061 Multi and lining square right sides together, then add a 9" stabilizer square on top. Sew the upper edge only, noting that the license plates are a one-way print. Turn one fabric over to encase the stabilizer and press. Topstitch the upper pocket edge. Repeat to make a second pocket. Quilt if desired.
5. With the pocket right side up and aligning the side and lower edges, baste one pocket to each quilted C8224 Jade side piece (figure 1).
6. Sew the upper edge of a pocketed side piece to one end of the quilted C5058 Multi top strip. Repeat with the opposite end to make one long gusset strip (figure 2).

Fig. 1


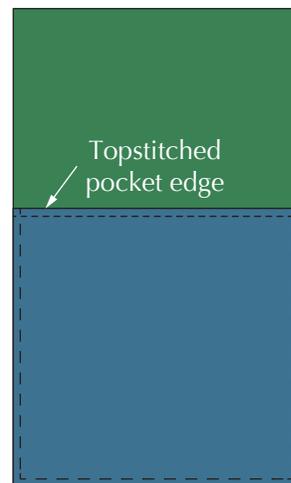


Fig. 2




7. Matching the lower corners of the front section to the lower pocket edges, sew the gusset in place, carefully turning the corners to avoid pleats. Leave the needle in the down position when turning corners (*figure 3*). Repeat to attach the opposite gusset side to the back cover.

Fig. 3

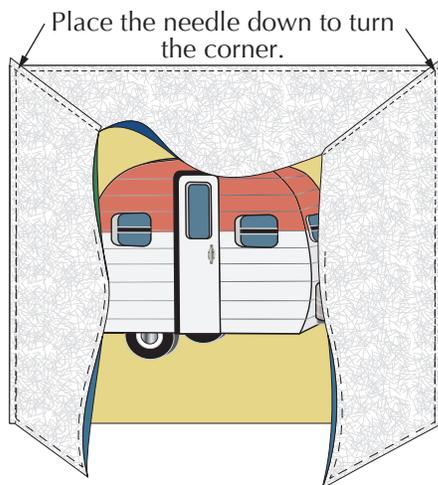

8. Sew one 9" x 15" lining rectangle to each short end of the 18" x 9" lining strip to make the lining gusset.
9. Repeat step 7 to sew the lining gusset to the lining front and back, leaving a 6" opening in one side for turning.
10. With right sides together, insert the outer cover into the lining. Matching gusset seams, sew around the bottom opening (*figure 4*).

Fig. 4

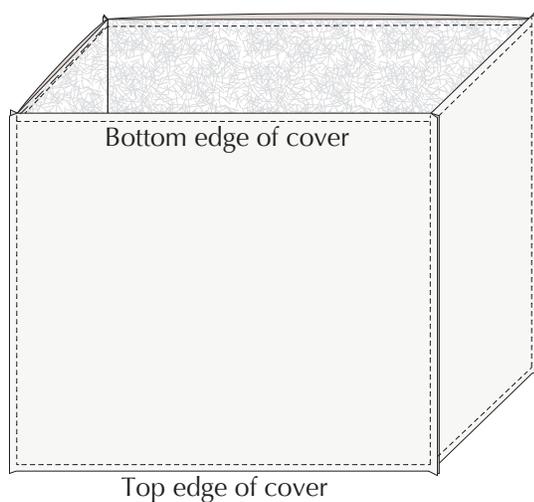

11. Turn the cover right side out through the lining opening. Press and topstitch the lower edge of machine cover.


Finishing

12. Hand stitch the lining opening and hand-tack the lining upper corners to the stabilizer to keep them in place.

Osie Lebowitz

©2017 Timeless Treasures www.ttfabrics.com
 This pattern is for individual home use only. This pattern may not be reproduced for commercial purposes (i.e., may not be sold).

Camper Design by Debra Gabel of
www.zebrapatterns.com

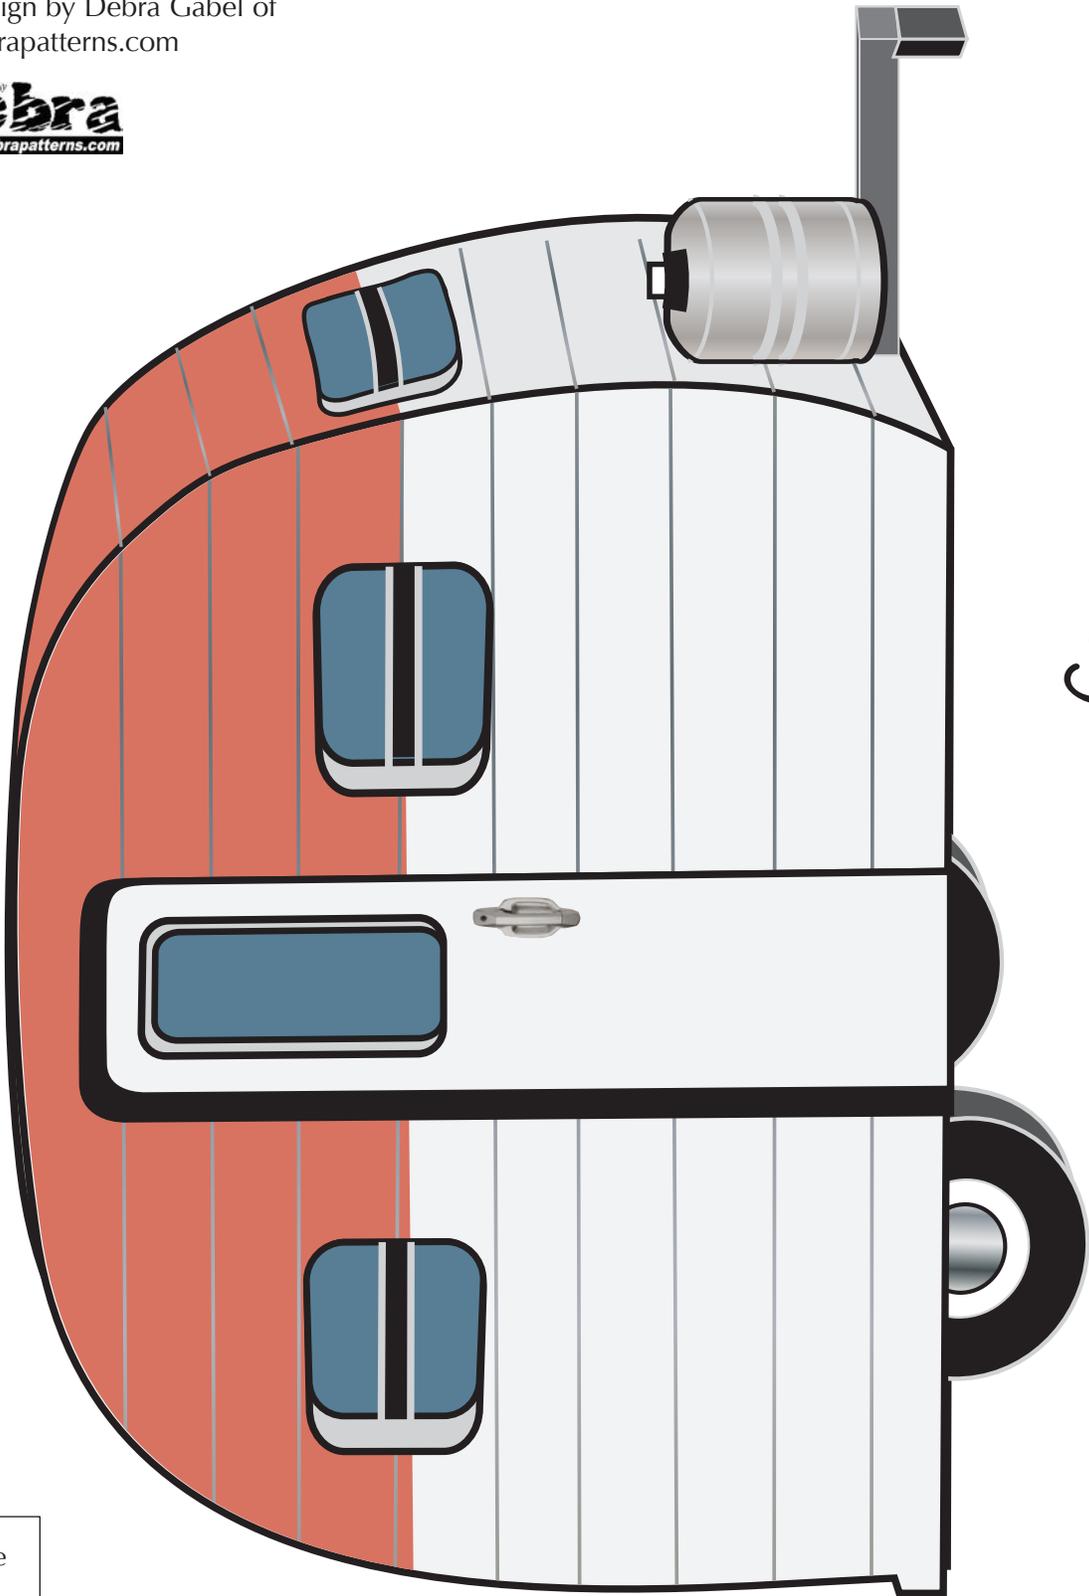

Camper

This square
should
measure
1" x 1"
when printed.



Imagination... Passion... Creativity