

NON-SLIP
4" Curvy
Log Cabin Trim Tool



Create the illusion of curves with this 4" version of our popular Curvy Log Cabin Trim Tool Series.
Designed by Jean Ann Wright

#CGRJAW6MINI
Made in USA




Creative Grids® USA, Inc.
400 W. Dussel Dr. Ste B,
Maumee, OH 43537
www.creativegridsUSA.com

Creative Grids® UK, Ltd.
Unit 23A Pate Road
Leicester Road Industrial Estate
Melton Mowbray
Leicestershire, LE13 0RG England
www.creativegrids.com



SEE A DEMO
SCAN WITH
ANY QR READER

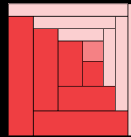

NON-SLIP
4" Curvy Log Cabin Trim Tool
Block size: 4" finished


Getting Started

Center squares: Cut a precise 1-1/8" square. (There is a template in the upper left corner of the 4" Curvy Log Cabin Trim Tool if you choose to use it.)

Narrow strips: Cut narrow strips 1-1/8" to 1-1/4" wide.

Wide strips: Cut wide strips 1-1/2" to 1-3/4" wide.

Tip: Sew the two wide strips in place around the center square first, then add two narrow strips, trim.

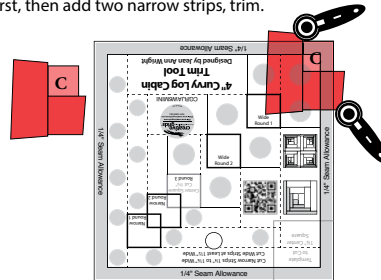

Align and trim strip ends

Some patterns may indicate sewing the narrow strips in place first. *Always follow the instructions on the pattern.*

Sewing and Trimming Sequence for the Curvy Log Cabin Block


The blocks are constructed by adding each new strip in a clockwise direction. Sew all seams with a scant 1/4" seam allowance. As you add each strip, fold the new strip out with the seam allowances towards the outside edge. Press the seams as you sew.

Trimming Round 1


After adding two wide strips to the center square and two narrow strips, position the Curvy Log Cabin Trim tool with the narrow strips in the upper right corner.

Position the Narrow Round 1 Centering Square over the center square of the block and trim up the right side and trim across the top.

Important tip: Be sure to line up the dotted lines on the ruler with the seam lines.

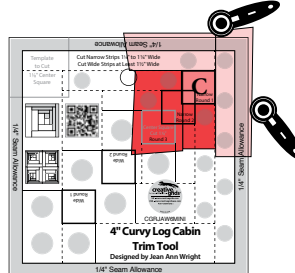


Turn the block **and** the ruler 180° (a half turn) and trim the wide strips in the same manner using the centering square labeled Wide Round 1.

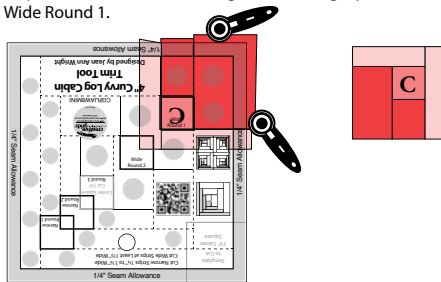


Trimming Round 2

After adding an additional round of wide and narrow strips, position the Curvy Log Cabin Trim tool with the narrow strips in the upper right corner. Position the Narrow Round 2 Centering Square over the center square of the block and trim up the right side and across the top.

Important tip: Be sure to line up the dotted lines on the ruler with the seam lines.


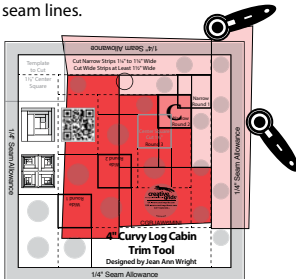


Turn the block and the ruler 180° (a half turn) and trim the wide strips in the same manner using the centering square labeled Wide Round 2.

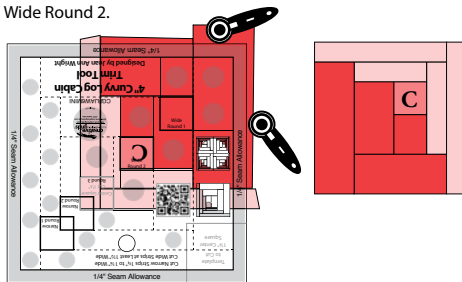

Trimming Round 3

After adding the final round of wide and narrow strips, position the Curvy Log Cabin Trim tool with the narrow strips in the upper right corner. Position the labeled Center Square on the trim tool over the center square of the block and trim **all four sides**, turning both block and ruler together to keep the block aligned for the final trim.

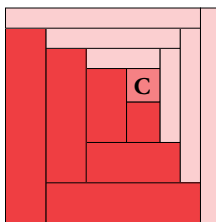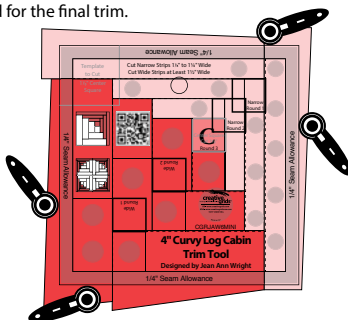

Curvy Log Cabin Block

