



NORTHCOTT
Cottons that feel like silk



Dreamland

by Deborah Edwards

All Around Town

by Deborah Edwards

ROAD TRIP ORGANIZER FREE PATTERN

By Northcott Studio designed by Cathey Marie Designs



Northcott Canada
101 Courtland Avenue
Vaughan, Ontario L4K 3T5

Northcott USA
1050 Valley Brook Ave,
Lyndhurst, NJ 07071

www.northcott.com

Road Trip Organizer

Fabric 1 (grey)

■ ½ yard

Cut (2) 15 ½" squares

Fabric 2 (lt. blue)

■ Fat Quarter or ⅓ yard

Cut (2) 1" x 5 ½"

Cut (2) 1 ¼" x 14 ½"

Cut (2) 5 ½" squares

Cut (1) 5 ½" x 15 ½"

Fabric 3 (dk. blue)

■ Fat Quarter or ⅓ yard

Cut (2) 5 ½" squares

Cut (2) 5 ½" x 15 ½"

Fabric 4 (black)

■ Fat Quarter or ¼ yard

Cut (2) 2 ½" x 15 ½"

Cut (2) 4" x 20"

Décor Bond

■ ½ yard

Cut (1) 15 ½" square

Fusible Fleece

■ ½ yard

Cut (1) 15 ½" square

Cut (2) 6 ¼" x 15 ½"

❖ Sew with a ¼" seam unless directed otherwise.

Supplies

Fabric 1 – ½ yard


Fabric 2 – Fat Quarter (FQ) or ⅓ yard

Fabric 3 – FQ or ⅓ yard

Fabric 4 – FQ or ¼ yard


Décor Bond – ½ yard

Fusible Fleece – ½ yard

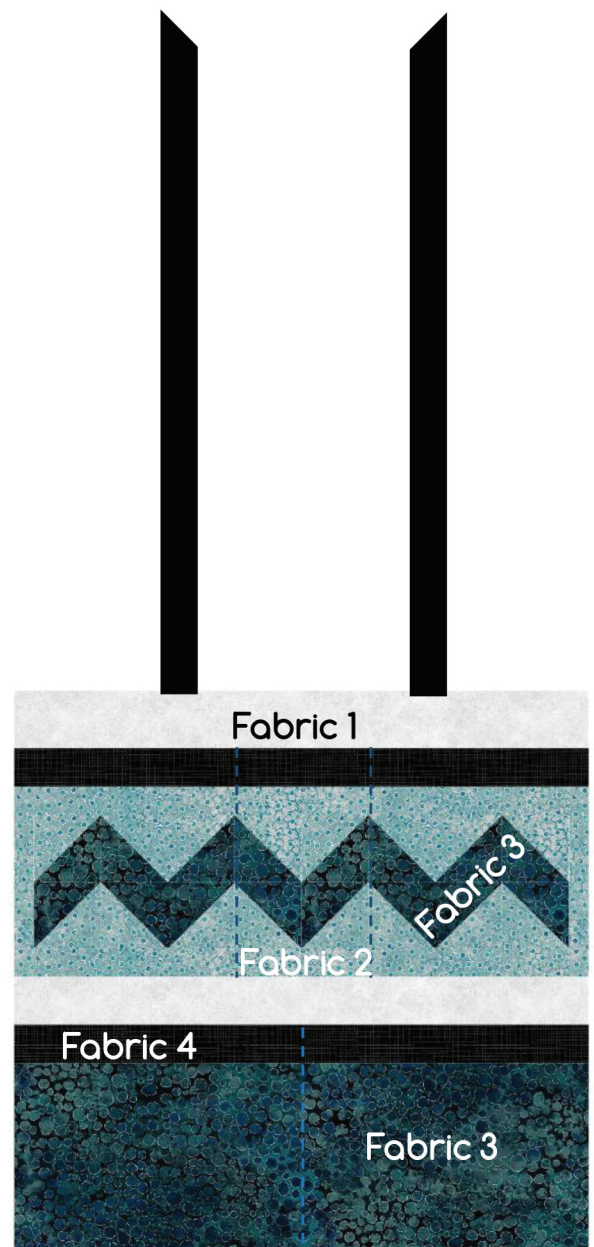


Top Pocket


- Draw diagonal lines, both directions, onto both 5 1/2" light blue squares.
- Place marked squares onto 5 1/2" dark blue squares, right sides together (RST).
- Sew 1/4" seam on both sides of all drawn lines.

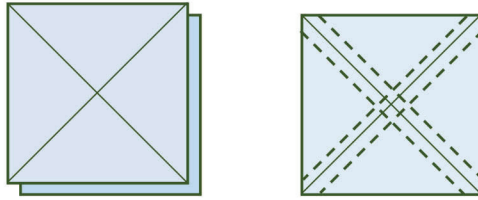


- As shown by red lines, cut in half vertically, horizontally, and on drawn lines, yielding 16 half square triangle (HST) blocks.

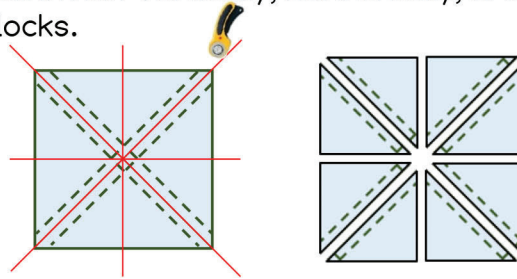


- Press seams of 8 blocks toward dk. blue and seams of remaining 8 blocks toward lt. blue.
- Square blocks to 2 1/4".
- Trim off dog ears if desired.
- With seams pressed in direction of arrows, as shown below, sew HST blocks together forming 2 rows of 8 blocks.
- Press top row seams to left and bottom row seams to right.
- Sew rows together, nesting seams.

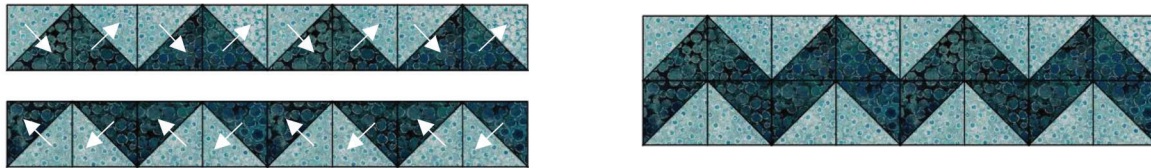


- Press seam open.
- Sew 1 1/4" x 14 1/2" lt. blue strips to top and bottom.
- Press seams toward strips.
- Sew 1" x 5 1/2" lt. blue strips to sides.
- Press seams toward strips.

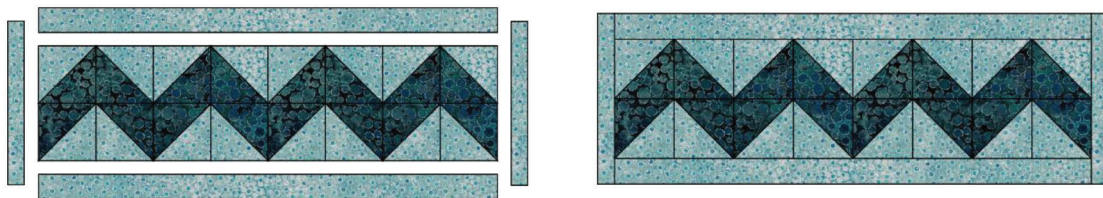

- Sew 2 ½" x 15 ½" black accent strip to top of unit.
- Press seam toward accent strip.
- Sew 5 ½" x 15 ½" lt. blue strip to other side of accent strip.
- Press seam toward lt. blue.


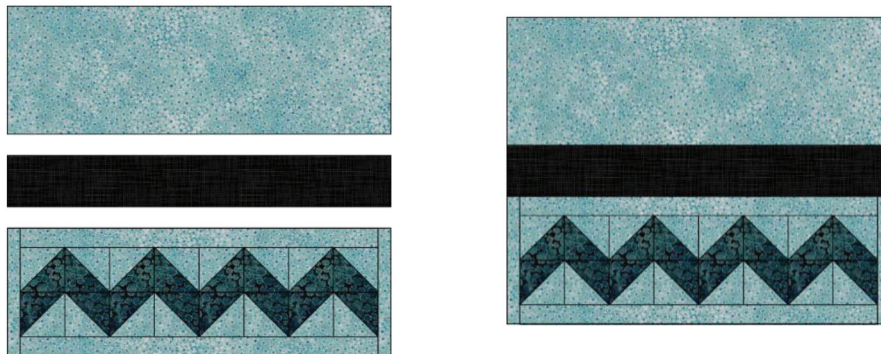


- Fuse 6 ¼" x 15 ½" fusible fleece onto wrong side of chevron half of unit.
- Fold in half, RST, nesting seams.
- Sew bottom seam.
- Turn tube right side out (RSO) and press.
- Topstitch pocket fabric ¼" up from accent fabric.

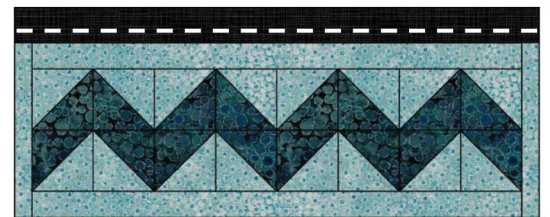


Bottom Pocket

- Sew 2 ½" x 15 ½" black accent strip between (2) 5 ½" x 15 ½" dk. blue rectangles.
- Press one seam toward accent strip and the other toward dk. blue.
- Fold in half, RST.
- Place 6 ¼" x 15 ½" fusible fleece onto wrong side of fabric on one side of unit.
- Flip RSO and press.
- Topstitch pocket fabric ¼" up from accent fabric.

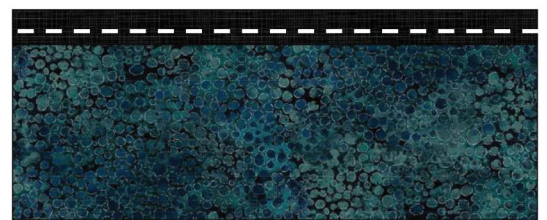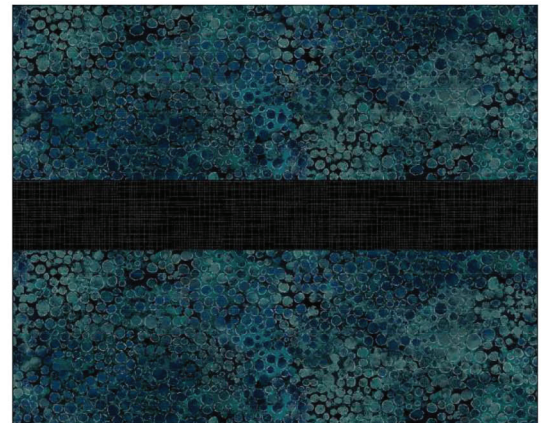

Ties

- Fold (1) 4" x 20" black tie piece in half lengthwise (2" x 20"), wrong sides together, and press.
- Open out and press one end over ¼".
- Fold corners of folded end in to center crease, forming a point.



- Fold long tie edges to center fold line.
- Re-fold on original center crease and press.
- Sew along edge, starting at unfolded end of tie and ending at point on other end.
- Repeat for second tie.



Finishing

- Fuse 15 ½" square of fusible fleece to wrong side of 15 ½" grey square.
- Position bottom pocket onto fabric side of square, matching bottom raw edges.
- With an ⅛" seam, baste sides and bottom.
- Mark and sew a dividing line down center of pocket.
- Position top pocket 1 ½" down from top of grey square.
- With an ⅛" seam, baste sides of pocket to square.
- With an ⅛" seam, sew bottom of pocket to square.
- Mark and sew dividing lines where desired.
- Place straight ends of each tie onto top raw edge of unit, 3 ½" in from both sides.
- Baste with an ⅛" seam.
- Fuse Décor Bond to wrong side of remaining 15 ½" grey square.
- Tuck ties in pockets to keep them out of your way.
- Place fabric side of square onto right side of pocket unit.
- Pin and sew around outer edge, leaving a 5 ½" opening between ties.
- Clip corners and turn RSO through 5 ½" opening.
- Press edges and slipstitch opening.

